



aLOKSAK

Electronics, personal items and firearms are damaged from exposure to the environment. aLOKSAK is the only re-sealable, flexible storage bag offering protection from all the elements. The patented, light-weight storage system prevents air, humidity, water, dust and sand from harming your valuables. aLOKSAK can also ensure your treasures are safe from the passage of time.

MILITARY GRADE: These bags are used for safe element proof transport and storage by outdoor enthusiasts, all branches of the U.S. and Foreign Military, and by many governmental and law enforcement agencies worldwide!

Features:

- Hermetic Seal - An Absolute Airtight Seal preventing the Re-entry or Release of Air, Water, Humidity, and Micro-Organisms
- Made in the USA
- Holds Five Patents
- Protects Against Microscopic Particles like Dust and Sand
- Recyclable and Reusable
- All Touch Screen Electronics Work 100% While Protected in the aLOKSAK
- Make and Receive Phone Calls While Phone is Protected in the aLOKSAK
- Stock Sizes Ranging from 5" x 4" to 12" x 48"

Technical Specs:

- FDA and NSA Approved Medical Grade Materials for Food and Biohazard Storage
- Comprised of a 6 Mil Patent Protected New Generation Film
- Certified Waterproof Up to 200 Feet/60 Meters
- No BPA or Use of Any Harsh Chemicals
- Durable 6 Mil Film has a "Cold-Crack" Tolerance to -40F/-40C, Far lower than that of PVC or Vinyl

OPSAK

Features:

- Hermetic Seal - An Absolute Airtight Seal preventing the Re-entry or Release of Air, Water, Humidity, and Micro-Organisms
- Made in the USA
- Traps Odors Inside the Re-sealable Lightweight Bag
- Stock Sizes Ranging from 7" x 7" to 28" x 20"
- Protects Against Microscopic Particles like Dust or Sand
- Recyclable and Reusable

Technical Specs:

- FDA & NSF Approved Food Safe Materials
- Excellent for Long Term Biohazard Storage
- Can Withstand Direct Heat Up to 165 Fahrenheit
- Add Boiling Water to the OPSAK to Rehydrate Food (cannot be used as a boil-in-bag)
- No BPA or Use of Any Harsh Chemicals
- Certified Waterproof Up to 200 Feet/60 Meters

Field Tested

"When bear canisters are overkill-but you still want to critter-proof your food against raccoons, squirrels, and marmots-get LOKSAK's OPSAK bag. These resealable, washable, polyethylene bags are watertight, airtight, and odorproof, so they prevent animals from sniffing out your edibles and toiletries." - Kelly Bastone Gear Guide BACKPACKER Magazine.

Caution: DO NOT CONTAMINATE THE OUTSIDE OF THE OPSAK BAG WITH ODORS FROM YOUR HANDS.



aLOKSAK® and OPSAK® Disclaimer:

aLOKSAK and OPSAK bags are durable but not indestructible. Normal wear is not a defect. Do not attempt to replace the aLOKSAK or OPSAK with a commercial over-the-counter reclosable bag. aLOKSAK and OPSAK bags have a unique closure system that holds five patents. These bags are approved for diving applications.

VERY IMPORTANT – Bag is waterproof only if sealed in the following way:

Seal zipper completely by pressing seal together at one edge of the bag and slowly sliding thumb and forefinger together along the full length of the opening. Repeat if necessary. Make certain there are no kinks or bends in the seal. The zipper seal should feel smooth and wrinkle-free.

To test bag prior to use, trap a small amount of air inside the bag. Seal zipper completely by following the instructions above. Submerge bag in a container of water and squeeze sides gently to test seal. If a steady stream of air bubbles appears, the bag is damaged or not sealed properly. Repeat the test to verify if the bag is not damaged. If defective and unused, contact LOKSAK for instructions on how to return the defective bag for replacement.

Replace the bags after extended use. Avoid exposure to excessive heat and caustic chemicals.

Initiate Warranty Service

Each product purchased on www.loksak.com will come with an invoice. To return an item, first contact LOKSAK and provide the original invoice or receipt and a reason for return or refund. LOKSAK will provide you with a RA (Return Authorization) number and shipping address. If requesting to replace an item, the item must be in new or like-new condition. Test the bag prior to contacting LOKSAK. If the bag is in like-new condition and is defective, contact a LOKSAK representative. An engineer will test the bag upon receipt.

If you wish to make a claim with respect to a LOKSAK product, you may email a LOKSAK representative via our contact form, <http://loksak.com/civilian/customer-support/>, and provide the following information:

- Receipt
- SKU(s) Purchased
- Purchase Date
- Description/Reason for Return
- All Contact Information

Please contact LOKSAK with any questions you may have about our products and the warranties covering them. Your satisfaction is our number one priority.

Return the product unopened and in the same condition in which you received it. Product must be returned within 30 days of the purchase date. If the packaging is damaged, there will be a 20% restocking fee.

Do not just send an order back. LOKSAK will not accept packages without an RA number or accept merchandise returned COD.

Returning a product without an RA number waives LOKSAK's responsibility to issue you a refund due to our inability to match your purchase with the return.

Replacement products are only offered on an exchange basis.

Credits will be issued to the credit card used in the purchase. LOKSAK will credit your account once we acknowledge receipt of your returned item. Please allow 5-7 business days after LOKSAK verifies your claim for your credit to be issued. Shipping charges are not refundable.

All LOKSAK products may be returned within thirty (30) days of purchase. LOKSAK is not liable for any loss or damages to personal property in the event of misuse or improper sealing.

Liability

IN NO EVENT SHALL COMPANY ITS DISTRIBUTORS OR SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL, EXEMPLARY OR PUNITIVE DAMAGES ARISING OUT OF THE USE OF THE PRODUCT, INCLUDING, WITHOUT LIMITATION, PROPERTY DAMAGE, LOSS OF VALUE OF THE PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE PRODUCT, OR LOSS OF USE OF THE PRODUCT OR ANY THIRD PARTY PRODUCTS THAT ARE USED IN OR WITH THE PRODUCT, EVEN IF COMPANY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. COMPANY HAS NO LIABILITY FOR ANY DAMAGE OR DESTRUCTION TO CONSUMER ELECTRONICS DEVICES OR OTHER PERSONAL PROPERTY THAT ARE IN THE PRODUCTS, INCLUDING, WITHOUT LIMITATION, LAPTOPS, CELLULAR PHONES, OR OTHER HANDHELD DEVICES, OR ANY LOSS OF DATA CONTAINED IN THE FOREGOING DEVICES, ETC. NOTWITHSTANDING ANY DAMAGES THAT YOU MIGHT INCUR FOR ANY REASON WHATSOEVER (INCLUDING, WITHOUT LIMITATION, ALL DAMAGES REFERENCED HEREIN AND ALL DIRECT OR GENERAL DAMAGES IN CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE), THE ENTIRE LIABILITY OF COMPANY AND ANY OF ITS DISTRIBUTORS AND/OR SUPPLIERS SHALL BE LIMITED TO THE AMOUNT ACTUALLY PAID BY YOU FOR THE PRODUCT. SOME STATES AND/OR JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Warranty

Our aLOKSAK and OPSAK are not indestructible and should be used with care. We do not warranty that this bag will protect your device in all environments. Do not expose to extreme heat. Our bags are not pressurized bags. User exposes their devices to hazards at own risk. User must follow all testing and sealing instructions carefully and replace a bag after extended use. LOKSAK will not be responsible for any damages due to improper sealing or not testing a new bag prior to use. For instructions, see our FAQ at <http://loksak.com/civilian/faq/>.

LOKSAK warrants the product against substantial defects in material and workmanship under normal use for a period of thirty (30) days. An original copy of the invoice or sales receipt from www.loksak.com is required for warranty authentication. The limited warranty does not cover products purchased through online auction sites or non-certified sellers. Warranty claims for products purchased through www.loksak.com must be made directly to LOKSAK. Warranty claims for products purchased through other dealers must be made with those dealers.

The limited warranty only applies to LOKSAK products. The warranty only applies to the normal use of the product. Normal wear and tear is to be expected. aLOKSAK and OPSAK need to be replaced after extended use. The warranty does not apply to damage caused by accident, abuse, acts of God, misuse, or unauthorized modifications.

Disclaimer

THE PRODUCT IS PROVIDED "AS IS" AND THE COMPANY MAKES NO OTHER EXPRESS OR IMPLIED WARRANTIES TO THE EXTENT PERMITTED BY LAW AND SPECIFICALLY DISCLAIMS AND EXCLUDES ALL IMPLIED WARRANTIES. IF SUCH DISCLAIMER OF ANY IMPLIED WARRANTY IS NOT PERMITTED BY LAW, THE DURATION OF ANY SUCH IMPLIED WARRANTIES IS LIMITED TO THE DURATIONS SET FORTH IN THIS LIMITED WARRANTY.

Caution: Leak-proof bags are durable but not indestructible. Normal wear is not a defect. DO NOT ATTEMPT TO REPLACE THE aLOKSAK or OPSAK WITH A COMMERCIAL OVER-THE-COUNTER RECLOSABLE BAG.

When placing munitions in our bags, it is imperative to use a type of Volatile Corrosion Inhibitor (VCI). When you seal our bags, you have to protect weapons/munitions from humidity in the air trapped inside prior to sealing. Nothing passes through our hermetical seal. That means what is in stays in, what is out stays out.

REPLACE THE BAGS AFTER EXTENDED USE

Avoid over exposure to extreme heat. Bags are not pressurized.

WICHTIG!

aLOKSAK Bags sind wasserdicht, wenn wie folgt verschlossen:

Zum Dichtigkeitstest vor Gebrauch der Tasche verschliessen Sie sie mit ein bisschen Luft im Innenraum, indem Sie die Verschlusslippen mit den Fingern von einer Seite zur anderen zusammenpressen. Der Verschluss sollte sich glatt und faltenfrei anfühlen.

Tauchen Sie Tasche unter Wasser und üben Sie leichten Druck aus. Wenn ein feiner Strom von Luftbläschen entweicht, ist das Siegel nicht richtig verschlossen oder die Tasche ist defekt. Wiederholen Sie Schritt eins um sicher zu gehen, dass die Tasche richtig verschlossen ist. Ist Ihr aLOKSAK Bag noch ungebraucht und defekt, kontaktieren Sie LOKSAK Inc., um das defekte Produkt zurückzusenden und kostenlosen Ersatz zu erhalten. Wenn sie die Tasche versiegeln, schliessen sie möglichst wenig Luft ein.

Warnung: aLOKSAK bags sind widerstandsfähig, aber nicht unzerstörbar. Gebrauchsabnutzung ist kein Defekt. Die biegsamen Siegellippen, die zum hermetischen Verschluss nötig sind, weisen Abnutzungserscheinungen auf, lange bevor der widerstandsfähige Film kaputt geht. aLOKSAK Bags haben ein einzigartiges, dreifach patentiertes Verschlusssystem, für wasserdicht bis 60 Meter zertifiziert worden ist.

ERSETZEN SIE DIE TASCHEN NACH INTENSIVEM GEBRAUCH

Vermeiden Sie extreme Hitzeinwirkung.

Nutzungsbestimmungen: aLOKSAK bag ist nicht unzerstörbar und sollte mit Sorgfalt behandelt werden. Es kann keine Garantie gegeben werden, dass diese Tasche Ihr Gerät in jeder Umgebung schützen kann. Vermeiden Sie extreme Hitzeinwirkung. aLOKSAK ist keine Überdrucktasche. Der Anwender setzt sein Gerät auf eigenes Risiko der Gefahr aus. Vor Gebrauch müssen die Anweisungen sorgfältig befolgt werden, die Tasche muss nach intensivem Gebrauch ersetzt werden.

LOKSAK ist keinesfalls haftbar für Schäden die durch nicht korrektes Verschliessen oder durch unterlassen des Dichtigkeitstests beim Wiederverwenden einer Tasche entstehen.

ZEER BELANGRIJK

aLOKSAK-zakjes zijn alleen waterproof als ze op de volgende manier worden gesloten:

sluit een klein beetje lucht in het zakje om het vóór gebruik te testen. Sluit de zipper volledig door uw vingers van het ene naar het andere uiteinde te bewegen en zorg daarbij dat er geen knikken of bochten in de sluiting zitten. De zipper moet glad en kreukvrij aanvoelen.

Dompel het zakje onder in water en knijp zacht in de zijken om de sluiting te testen. Als u een klein stroompje of luchtballen ziet, is het zakje kapot of niet goed gesloten. Herhaal de test om te controleren of het zakje beschadigd is. Verwijder bij het sluiten van het zakje zoveel mogelijk lucht.

Waarschuwing: aLOKSAK-zakjes zijn duurzaam, maar niet onverwoestbaar. Slijtage door gebruik is geen constructiefout. DE PLOOIBARE SLUITING DIE NODIG IS BIJ HET MAKEN VAN ONZE LUCHTDICHTE AFSLUITING ZAL EERDER SLIJTEN DAN DE DUURZAME BODY VAN HET ZAKJE. aLOKSAK-zakjes hebben een uniek sluitingssysteem met drie patenten en zijn door gecertificeerd als lek vrij tot op 60 meter diepte.

VERVANG DE ZAKJES NA VEELVULDIG GEBRUIK VAN DE SLUITING

Vermijd overmatige blootstelling aan extreme hitte.

Garantie: een aLOKSAK-zakje is niet onverwoestbaar en moet met zorg worden behandeld. We garanderen niet dat dit zakje uw apparatuur onder alle omstandigheden beschermt. Vermijd blootstelling aan extreme hitte. Onze aLOKSAK is geen vacuümzakje. De gebruiker stelt apparaten op

eigen risico bloot aan gevaren. De gebruiker dient alle test- en sluitingsinstructies zorgvuldig op te volgen en een zakje na veelvuldig gebruik te vervangen. LOKSAK is niet verantwoordelijk voor enige schade die ontstaat door onjuist sealen of door het niet testen van een nieuw of gebruikt zakje voor gebruik.

**MUY IMPORTANTE**

Los aLOKSAK son estancos solamente si se usan de la manera siguiente: Para probar la bolsa antes de su uso, deje un poco de aire en su interior y cierre completamente deslizando los dedos de extremo a extremo asegurándose de que no hay arrugas o torceduras. El cierre tiene que ser suave.

Sumerja la bolsa en un recipiente con agua y aprete suavemente para probar el sellado. Repita la operación asegurándose de que la bolsa no ha sufrido ningún daño. Si su bolsa fuese defectuosa contacte con LOKSAK y recibirá las instrucciones pertinentes para el cambio. Una vez probada cierre la bolsa con el mínimo de aire posible en su interior.

Attention: les sacs aLOKSAK son duraderas pero non indestructibles. El pliegue de nuestro cierre hermético no sera tan duradero como el cuerpo de la bolsa. Las bolsas aLOKSAK tienen un sistema de cierre único protegido por tres patentes y certificado a prueba de fugas hasta 60m.

SUSTITUIR LAS BOLSAS TRAS UN USO PROLONGADO

Evitar exponer al calor extremo.

Garantía: las bolsas aLOKSAK no son indestructibles y deben ser usadas con atención. No podemos garantizar que la bolsa proteja su dispositivo entodos los entornos. No exponer al calor extremo. Nuestra aLOKSAK no es una bolsa presurizada. El usuario expone su dispositivo por cuenta y riesgo. El usuario debe probar y seguir las instrucciones de cierre y sustituir su bolsa tras un uso prolongado. LOKSAK no se hace responsable de ningún desperfecto debido a usos impropios o a daños por un sellado inadecuado o por no haber verificado el cierre antes del uso.

**TRÈS IMPORTANT**

aLOKSAK Bags sont uniquement étanches à l'eau quand fermés de manière suivante:

Afin de tester l'étanchéité, laissez un peu d'air dans l'intérieur du sac, ensuite fermez le sac en pressant sur la fermeture d'un côté à l'autre. Assurez vous que la fermeture n'a pas de plis.

Immergez le sac dans l'eau en exerçant une légère pression sur le sac. Si des bulles d'air y sortent, le sac est alors soit endommagé, soit mal étanché. Répétez le test afin de vérifier si le sac est endommagé. Si le sac non utilisé est endommagé veuillez contacter LOKSAK Inc. pour savoir comment renvoyer le sac pour en recevoir un nouveau. Quand vous fermez le sac, veuillez vous assurer d'avoir le moins d'air possible dans le sac.

Avertissement: les sacs aLOKSAK sont très résistants mais pas indestructibles. L'usure normale n'est pas une mal façon. LA FERMETURE PLIABLE NÉCESSAIRE POUR GARANTIR UNE FERMETURE ÉTANCHE S'USE BIEN AVANT LE SAC MÊME. Les sacs aLOKSAK ont un système de fermeture unique ayant trois brevets. De plus, il est approuvé étanche jusqu'à une profondeur de 200 pieds, soit 60 mètres.

REPLACEZ LES SACS APRÈS L'UTILISATION INTENSIVE

Évitez toute exposition extrême à la chaleur.

Conditions d'utilisation: les aLOKSAK ne sont pas indestructibles et doivent être utilisés avec prudence. Nous ne garantissons pas que ce sac protégera tous vos ustensiles dans tout environnement. Évitez l'exposition à des températures extrêmes. Nos sacs aLOKSAK ne sont pas des

sacs surpression. Les ustensiles sont exposés à des périls au risque de l'utilisateur. Les utilisateurs doivent respecter les règles d'utilisation et tester la étanchéité après chaque utilisation. LOKSAK n'est pas responsable pour tout endommagement dû à une fermeture incorrecte ou si l'utilisateur manque de tester la fermeture avant l'utilisation.

MOLTO IMPORTANTE

I sacchi LOKSAK garantiscono la tenuta solamente se utilizzati come viene descritto in seguito:

Per provare la resistenza del sacco prima dell'uso, far entrare una piccola quantità di aria nello stesso. Chiudere la sigillatura da parte a parte, scivolando con le dita lungo il sigillo, facendo attenzione che non ci siano delle parti non chiuse correttamente. L'azione di chiusura dovrebbe essere fluida e senza intoppi.

Sommergere il sacco in una bacinella d'acqua e premere i lati del sacco per testare la chiusura. Se appaiono alcune bolle d'aria all'interno della quantità d'acqua significa che il sacco può essere difettato o non chiuso correttamente. Ripetere il test per verificare se il sacco sia difettato. Se viene provato nuovamente il difetto ed il sacco è nuovo, contattate LOKSAK inc: vi verranno date istruzioni sul come ritornare il sacco difettato e riceverne uno nuovo. Togliere la maggior quantità d'aria possibile quando il sacco verrà chiuso.

Attenzione: i sacchi LOKSAK sono resistenti, ma non indistruttibili. Il sistema di chiusura che garantisce l'ermeticità dei sacchi si può deteriorare molto prima rispetto al corpo del sacco. Il sistema di chiusura è coperto da tre diversi brevetti e certificato per una protezione fino ad una profondità di 200 piedi/ 60 metri.

Quando vengono inserite delle munizioni all'interno del sacco è necessario utilizzare un sistema anti-ossidazione. Quando il sacco viene chiuso è responsabilità dell'utilizzatore proteggere armi/ munizioni dall'umidità che si può generare con l'aria rimasta all'interno dello stesso sacco nel momento della chiusura. Infatti, una volta chiuso il sacco non permette l'uscita d'aria così come l'entrata.

SOSTITUIRE IL SACCO dopo un uso elevato nel tempo.

Evitare un uso estremo del sacco continuo nel tempo.

Garanzia: il sacco LOKSAK non è indistruttibile e deve essere usato con attenzione. Non garantiamo che il sacco LOKSAK possa proteggere qualsiasi cosa vogliate inserirvi in tutte le condizioni. Non esporre il sacco calore. Il sacco LOKSAK non è pressurizzato. L'utilizzatore del sacco LOKSAK è responsabile dell'esposizione di ciò che viene inserito e dell'uso che ne viene fatto.

L'utilizzatore del sacco LOKSAK deve seguire con attenzione le istruzioni relative alla prova di resistenza sopra suggerita e sostituire il sacco dopo un uso elevato nel tempo. LOKSAK non è responsabile per ogni danno dovuto all'uso non corretto della chiusura o al fatto di non avere testato la resistenza della stessa chiusura ermetica.

Per ulteriori informazioni visitate il sito www.loksak.com

